



Atmos 2000

ORDERCODE 60873



Highlite International B.V.
Vestastraat 2
6468 EX Kerkrade
The Netherlands
Phone: +31 45-5667700

SHOWELECTRONICS FOR PROFESSIONALS

Congratulations!

You have bought a great, innovative product from Showtec.

The Showtec Atmos 2000 brings excitement to any venue. Whether you want simple plug-&-play action or a sophisticated DMX show, this product provides the effect you need.

You can rely on Showtec, for more excellent lighting products.

We design and manufacture professional light equipment for the entertainment industry.

New products are being launched regularly. We work hard to keep you, our customer, satisfied.

For more information: iwant@showtec.info

You can get some of the best quality, best priced products on the market from Showtec.

So next time, turn to Showtec for more great lighting equipment.

Always get the best -- with Showtec !

Thank you!



Warning	2
Safety-instructions.....	2
Operating Determinations.....	4
Rigging.....	4
Return Procedure.....	5
Claims.....	5
Description	6
Features.....	6
Overview.....	6
Backside.....	7
Installation	7
Installing the fogger.....	7
Set Up and Operation	8
Control Modes.....	8
Wireless remote control.....	8
Wired Remote control.....	8
Multiple Atmos foggers (DMX control).....	9
Dipswitch setting for DMX Mode.....	10
DMX Quick Reference Chart.....	11
Fixture Linking.....	12
Data Cabling.....	12
DMX Channels.....	12
Maintenance	12
Performance notes.....	13
Replacing the Fuse.....	13
Troubleshooting	13
No Response to DMX	13
Product Specifications	15

WARNING

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**

Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Your shipment includes:

- Showtec Atmos 2000 fogger with powercable 1,25m
- Included: Remote Control; Cable length 5m.
- Included: Wireless Remote Control
- User manual



CAUTION!
Keep this device away from rain and moisture!
Unplug mains lead before opening the housing!



CAUTION!
Keep this device away from rain and moisture!
Unplug mains lead before filling the tank!



**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**

SAFETY INSTRUCTIONS

Every person involved with the installation, operation and maintenance of this device have to:

- be qualified
- follow the instructions of this manual



CAUTION! Be careful with your operations.
With a dangerous voltage you can suffer
a dangerous electric shock when touching the wires!



Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never aim the output nozzle directly at people.
- Never aim the output nozzle at open flames.
- Never add flammable liquids of any kind (oil, gas, perfume) to the fog liquid.
- Never drink fog liquid. If it is ingested, call a doctor immediately. If fog liquid comes in contact with skin or eyes, rinse thoroughly with water.
- Never lock smoke-filled rooms. Risk : panic among the locked persons!
- Never smoke permanently! The smoke must only be used for a short period -
- Do not insert objects into air vents.
- Do not open the device and do not modify the device.
- Do not connect this device to a dimmerpack.
- Do not switch the device on and off in short intervals, as this would reduce the device's life.
- Do not touch the fogger output bare-handed during its operation (output becomes very hot).
- Do not shake the device. Avoid brute force when installing or operating the device.
- Only use device indoor, avoid contact with water or other liquids.
- Only use smoke in well ventilated rooms.
- Only use the high-quality, water-based fog liquid, that your Showtec dealer recommends. (5L fogger fluid ordercode 60603) Other fog liquids may cause poor effect fog, clogging and "spitting" of unevaporated liquid.
- Avoid flames and do not put close to flammable liquids or gases.
- Always make sure there is sufficient liquid in the fog liquid tank. Operating this unit without liquid will cause damage to the pump and the heater.
- Always allow free air space of at least 20 cm around the sides and top of the unit.
- Always drain tank before shipping or otherwise transporting this unit.
- Always keep tank cap closed while operating.
- Always keep the fog machine upright.
- Always unplug your SHOWTEC Fog Machine before filling its tank.
- For adult use only. Fog machine must be installed out of the reach of children. Never leave the unit running unattended. Leave the grid guarding the nozzle in place if the machine is to be used in the presence of children
- Always keep the nozzle at least 50 cm away from contact with anything, while in operation.
- Always disconnect power from the mains, when device is not used or before cleaning ! Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power-cord is never crimped or damaged. Check the device and the power-cord from time to time.
- Make sure that the core diameter of extension cords and power cords is sufficient for the required power consumption of the device.
- The cable insert or the female part in the device must never be strained. There must always be sufficient cable to the device. Otherwise, the cable may be damaged which may lead to deadly electrical shocks.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec Fog Machine fails to work properly, discontinue use immediately. Drain all fog liquid from the tank, pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For replacement use fuses of same type and rating only.
- Allow time to cool down, before cleaning or servicing.

- The residence time of persons in smoke-filled rooms with less than 15 m of sight must never exceed 5 minutes.
- The fog vapour at point of release is under pressure and is extremely hot.
- The output nozzle becomes very hot during operation (300 degrees C). Keep flammable materials at least 50 cm away from the nozzle.
- The use of smoke-fluid is only allowed for adults.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- In dense, smoke-saturated surroundings, the oxygen portion is substantially reduced!
- The smoke density must be portioned in a way that the sight will always be above 5 m - Danger of anxiety state due to missing orientation!
- The user is responsible for correct positioning and operating of the Atmos 2000. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- Every smoke-filled room must be overseen by a skilled person.
- WARRANTY: Till one year after date of purchase.

Operating instructions:

This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.

The minimum distance between light-output and the illuminated surface must be more than 0,5 meters.

The maximum ambient temperature $t_a = 45^\circ\text{C}$ must never be exceeded.

The relative humidity must not exceed 50 % with an ambient temperature of 45°C .

If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.

Any other operation may lead to dangers like short-circuit, burns, electric shock, explosion, crash etc.

You endanger your own safety and the safety of others

Improper installation can cause serious damage to people and property !

Rigging

Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

Do not attempt the installation yourself !

Always let the installation be carried out by an authorized dealer !

Procedure:

- If the fogger is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the fogger, with the mounting-bracket, to the trussing system.
- The fogger must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the fogger, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

The Atmos Fogger can be placed on a flat stage floor or mounted to any kind of truss by a clamp.

Improper installation can cause serious damage to people and property !

Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	FASE
N	BLUE	BLACK	SILVER	NUL
	YELLOW/GREEN	GREEN	GREEN	EARTH

Make sure that the device is always connected properly to the earth!



Return Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail aftersales@highlite.nl and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) A brief description of the symptoms

Claims

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.

Description of the device

Features

The Atmos 2000 fogger is a versatile and powerful fogger from Showtec.

- 2000 W Heater
- Warm-up time approx. 6 min.
- Fog output 40000cu.ft/min.
- Tank Capacity: 3,2 L.
- Fluid Consumption: 2 min / 1 liter
- DMX-512 Control
- DMX-512: 1 Channel
- DMX Setup via Dipswitches
- DMX Connector: 3-pin DMX In and DMX Out XLR connector
- Include Remote: On-Off Remote
- Remote Connection: 5 Pole Din
- Included: Remote Control; Cable length 5m. with Timer/Remote Controller
- Also included: Wireless Remote Control; Fogger with external Receiver unit
- Fuse 10A / 250V
- Dimensions: 500 x 320 x 320 mm
- Weight: 7,04 kg

Overview



Fig. 1

Backside

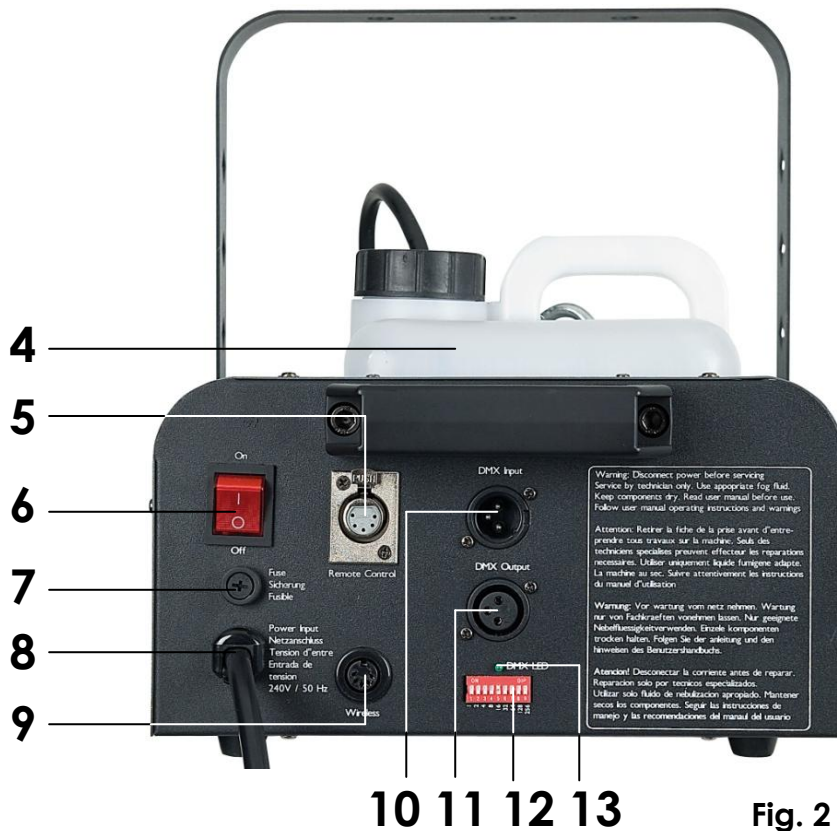


Fig. 2

- | | |
|---|--|
| 4) 3,2 L Liquid tank | 10) 3-pin DMX In |
| 5) Wired Remote control input | 11) 3-pin DMX Out |
| 6) ON/OFF | 12) DMX Dip Switches |
| 7) Fuse 10A / 250V | 13) DMX LED, blinks when DMX signal is present |
| 8) AC 220~240V | |
| 9) 5-pin Wireless remote control input; also works with 50333 MKII | |
| Use FL513 as connection cable for connecting to 50333 | |

Installation

Installing the Fogger

Remove all packing materials from the fog machine. Check that all foam and plastic padding is removed, especially in the nozzle area.

Fill with Fog Liquid (ordercode 60603) or other high-quality water-based fog fluid. Any other types of fluid can damage the unit. Be careful not to exceed the maximum fluid level. **DO NOT OVERFILL.**

When filled, place cap back on liquid tank.

Firmly attach the remote control cable to the proper input on the rear of the machine

The unit can also be operated at floor level or sitting on any regular surface as well.

If the unit is to be mounted using the bracket, it is important that the fog does not shoot directly at any one's face. Therefore, do not point the nozzle in a direction that will aim directly at a person.

Whatever installation method you choose, do not allow the unit to have more than a 15 degree angle of inclination.

Always disconnect from electric mains power supply before cleaning or servicing.

Damages caused by non-observance are not subject to warranty.

Set Up and Operation

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Pay Attention !!

Always monitor tank fluid level as you are fogging.

Running a fog machine with no fluid can permanently damage the unit.

Control Modes

There are 3 ways to control the fogger:

- 1) Wireless remote control (stand-alone)
- 2) Wired remote control (stand-alone)
- 3) DMX512 (1 Channel)

Wireless remote control

1. You can use the Atmos 2000 with a wireless remote control.
2. Be sure to plug the receiver into the connector (9) on the backside of the fogger.
3. Just press one of the two buttons to start fogging, both buttons have the same function.



Wired Remote control



Fig. 3

Its three controls (1, 2, 3) knobs allow the operator to customize fog machine functions by adjusting output duration, interval and output volume.

1. Adjust the duration of each fog emission (within the range of 1 to 10 seconds) by means of the INTERVAL control. This must be used in combination with the TIMER button.
2. Adjust the interval between each fog emission (within the range of 10 seconds to 5 minutes) by means of the VOLUME control.
3. Adjust the OUTPUT volume of each fog emission (within the range of minimum to maximum) by means of the VOLUME control.
4. Press the yellow TIMER button to activate the timer function. This function is used in combination with the interval control.
5. Press down the red CONTINUOUS button for output. This only works once you have pressed the green button.
6. When pressed, the green MANUAL button overrides all other function controls, and activates maximum output. The red button must be pressed down, when using the green button.

Note: When using this fogger as a stand-alone unit, the green LED will dim when the device is warming up again.

Multiple Atmos foggers (DMX Control)

1. Fasten the effect light onto firm trussing. Leave at least 1 meter on all sides for air circulation.
2. Always use a safety cable (ordercode 70140 / 70141).
3. Use a 3-p XLR cable to connect the Atmos foggers and other devices.


Occupation of the XLR-connection:

DMX-OUTPUT XLR mounting-socket:




- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

DMX-input XLR mounting-plug:

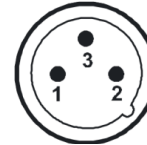

- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

The transformation of the controller line of 3 pins and 5 pins (plug and socket)

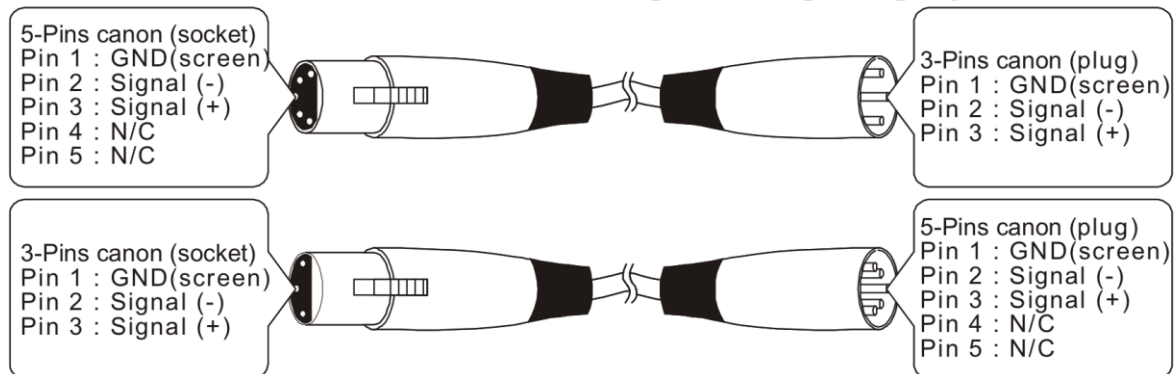

4. Link the units as shown in (figure 4), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.
5. Supply electric power: Plug electric mains power cords into each unit's IEC socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

Multiple Atmos foggers DMX Set Up



Fig. 4

Note : Link all cables and set dip switches before connecting electric power

After switching on, the Atmos fogger will automatically detect whether DMX 512 data is received or not. If there is no data received, the problem may be:


- The XLR cable from the controller is not connected with the input of the Atmos fogger.
- The controller is switched off or defective, the cable or connector is defective, or the signal wires are swapped in the input connector.

Note: It's necessary to insert a XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.

Dipswitch setting for DMX Mode

DMX products must have their own "address" to receive DMX signals.

Addresses on the controller are set by flipping the appropriate DMX dip switches #1 - #9.

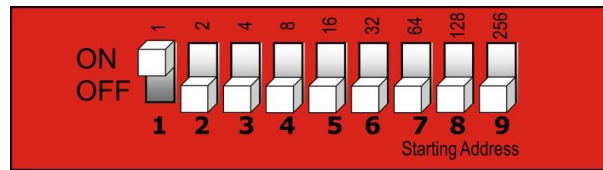


You need to know that DMX address settings are the sum of the dip switch values.

A standard DMX address for a Showtec Atmos fogger, which has 1 channel is as follow:

Example

Atmos fogger **Address Value** **DMX Dip Switches "ON"**
Unit 5 5 #1 , #3

Switch	Value
#1	1
#3	4 +
Total sum	5

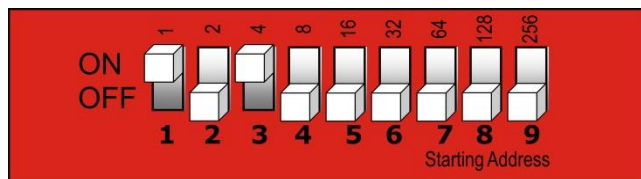

Explanation: Since each unit has 1 channel, each address advances 1 value (See Address Value above). Once address values are determined, add DMX dip switch values to obtain the appropriate address (DMX Dip Switches "ON") for each unit. Flip appropriate DMX dip switches on each unit.

Example:

1. If you want to give a Atmos fogger DMX address 133, you first have to find the number 133 in the DMX Chart. (See page 11)
2. Then look at the left side (Dip Switches #1-#5) horizontally from 133.
In the Table you'll see #1=ON, #2=OFF, #3=ON, #4=OFF, #5=OFF.
3. Finally look at the upper side of the table (Dip Switches #6-#9) vertically from 133.
In the Table you'll see #6=OFF, #7=OFF, #8=ON, #9=OFF.

DMX Address Quick Reference C

DMX DIP SWITCH SET					#9						
0=OFF					#8	0	0	0	0	0	0
1=ON					#7	0	0	1	1	0	0
					#6	0	1	0	1	0	1
#1	#2	#3	#4	#5							
0	0	0	0	0		32	64	96	128	160	
1	0	0	0	0	1	33	65	97	129	161	
0	1	0	0	0	2	34	66	98	130	162	
1	1	0	0	0	3	35	67	99	131	163	
0	0	1	0	0	4	36	68	100	132	164	
1	0	1	0	0	5	37	69	101	133	165	
0	1	1	0	0	6	38	70	102	134	166	

DMX Address Quick Reference Chart

Dip Switch Position

DMX DIP SWITCH SET 0=OFF 1=ON					#9	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1		
					#8	0	0	0	0	1	1	1	1	0	0	0	0	1	1	1	1	1
					#7	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1	1
					#6	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	1
#1	#2	#3	#4	#5																		
0	0	0	0	0		32	64	96	128	160	192	224	256	288	320	352	384	416	448	480		
1	0	0	0	0	1	33	65	97	129	161	193	225	257	289	321	353	385	417	449	481		
0	1	0	0	0	2	34	66	98	130	162	194	226	258	290	322	354	386	418	450	482		
1	1	0	0	0	3	35	67	99	131	163	195	227	259	291	323	355	387	419	451	483		
0	0	1	0	0	4	36	68	100	132	164	196	228	260	292	324	356	388	420	452	484		
1	0	1	0	0	5	37	69	101	133	165	197	229	261	293	325	357	389	421	453	485		
0	1	1	0	0	6	38	70	102	134	166	198	230	262	294	326	358	390	422	454	486		
1	1	1	0	0	7	39	71	103	135	167	199	231	263	295	327	359	391	423	455	487		
0	0	0	1	0	8	40	72	104	136	168	200	232	264	296	328	360	392	424	456	488		
1	0	0	1	0	9	41	73	105	137	169	201	233	265	297	329	361	393	425	457	489		
0	1	0	1	0	10	42	74	106	138	170	202	234	266	298	330	362	394	426	458	490		
1	1	0	1	0	11	43	75	107	139	171	203	235	267	299	331	363	395	427	459	491		
0	0	1	1	0	12	44	76	108	140	172	204	236	268	300	332	364	396	428	460	492		
1	0	1	1	0	13	45	77	109	141	173	205	237	269	301	333	365	397	429	461	493		
0	1	1	1	0	14	46	78	110	142	174	206	238	270	302	334	366	398	430	462	494		
1	1	1	1	0	15	47	79	111	143	175	207	239	271	303	335	367	399	431	463	495		
0	0	0	0	1	16	48	80	112	144	176	208	240	272	304	336	368	400	432	464	496		
1	0	0	0	1	17	49	81	113	145	177	209	241	273	305	337	369	401	433	465	497		
0	1	0	0	1	18	50	82	114	146	178	210	242	274	306	338	370	402	434	466	498		
1	1	0	0	1	19	51	83	115	147	179	211	243	275	307	339	371	403	435	467	499		
0	0	1	0	1	20	52	84	116	148	180	212	244	276	308	340	372	404	436	468	500		
1	0	1	0	1	21	53	85	117	149	181	213	245	277	309	341	373	405	437	469	501		
0	1	1	0	1	22	54	86	118	150	182	214	246	278	310	342	374	406	438	470	502		
1	1	1	0	1	23	55	87	119	151	183	215	247	279	311	343	375	407	439	471	503		
0	0	0	1	1	24	56	88	120	152	184	216	248	280	312	344	376	408	440	472	504		
1	0	0	1	1	25	57	89	121	153	185	217	249	281	313	345	377	409	441	473	505		
0	1	0	1	1	26	58	90	122	154	186	218	250	282	314	346	378	410	442	474	506		
1	1	0	1	1	27	59	91	123	155	187	219	251	283	315	347	379	411	443	475	507		
0	0	1	1	1	28	60	92	124	156	188	220	252	284	316	348	380	412	444	476	508		
1	0	1	1	1	29	61	93	125	157	189	221	253	285	317	349	381	413	445	477	509		
0	1	1	1	1	30	62	94	126	158	190	222	254	286	318	350	382	414	446	478	510		
1	1	1	1	1	31	63	95	127	159	191	223	255	287	319	351	383	415	447	479	511		

Dip Switch Position

DMX Address

Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Important: Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.



Maximum recommended DMX data link distance: 100 meters
Maximum recommended number of Atmos foggers on a DMX data link: 30 fixtures

Data Cabling

To link fixtures together you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

DAP Audio Certified DMX Data Cables

- DAP Audio cable for allround use. bal. XLR/M 3 p. > XLR/F 3 p.
Ordercode FL01150 (1,5m.), FL013 (3m.), FL016 (6m.), FL0110 (10m.), FL0115 (15m.), FL0120 (20m.).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL71150 (1,5m.), FL713 (3m.), FL716 (6m.), FL7110 (10m.).

DMX Channels

Channel 1 – Output

0-255	From 0% - 100% volume output
-------	------------------------------

Maintenance

The Atmos 2000 fogger requires almost no maintenance. However, you should keep the unit clean. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid.

Please clean internal components once a year with a light brush and vacuum cleaner. Do not use alcohol or solvents.

Keep connections clean. Disconnect electric power, and then wipe the connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

Do not allow the fog liquid to become contaminated. Always replace the caps on the fog liquid container and the fog machine liquid tank immediately after filling.

After every 40 hours of continuous operation, it is recommended to run a cleaning solution composed of 80% distilled water/20% white vinegar through the system to prevent the accumulation of particulate matter in the heating element.

When cleaning, use only a clean, lint-free soft cloth. An effective cleaning regimen is as follows:

1. While unit is unplugged and cool, unscrew nozzle at very front of unit and clean out debris with vinegar and a pipe cleaner, making sure that the hole is free of clogs.
2. Empty all fog fluid from machine. Add cleaning solution to tank. Plug unit in and begin warm up.
3. Run unit in a well-ventilated area until tank is empty.
4. Replace nozzle and refill with liquid.

Performance Notes

- All fog machines develop condensation around the output nozzle. Because this may result in some moisture accumulation on the surface below the output nozzle, consider this condensation when installing your unit.
- Fog machines may sputter small amounts of fog occasionally during operation and for a minute or so after being turned off.
- All fog machines have a recycling period after bursts of fog, when the machine will shut itself down for a short period in order to heat back up. During this time no fog can be produced.

Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below to do so.

1. Unplug the unit from electric power source.
2. Insert a flat-head screwdriver into a slot in the fuse cover. Turn the screwdriver to the left, at the same time gently push a bit (Turn and Push). The fuse will come out.
3. Remove the used fuse. If brown or unclear, it is burned out.
4. Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Troubleshooting

Showtec Atmos 2000 Fogger

This troubleshooting guide is meant to help solve simple problems.

Always monitor tank fluid level as you are fogging. Running a fog machine with no fluid can permanently damage the unit.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

If the fogger does not operate properly, refer servicing to a technician.

1. If you experience low output, pump noise or no output at all, unplug immediately.
2. Check fluid level, the external fuse, remote connection, and power from the wall.
3. If all of the above appears to be O.K., plug the unit in again.
4. If fog does not come out after holding the remote button down for 30 seconds, check the hose attached to the tank to make sure there is fluid going through the hose. Make sure the fogger isn't warming up.
5. If you are unable to determine the cause of the problem, do not simply continue pushing the remote button, as this may damage the unit.
6. Return the machine to your Showtec dealer.

No Response to DMX

Response: Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

1. Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
2. Determine whether the controller or light effect is at fault. Does the controller operate properly with other DMX products? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

See next page for more problem solving.

Problem	Probable cause(s)	Remedy
One or more fixtures are completely dead.	No power to the fixture	· Check that power is switched on and cables are plugged in.
	Primary fuse blown.	· Replace fuse.
Fixtures reset correctly, but all respond erratically or not at all to the controller.	The controller is not connected.	· Connect controller.
	3-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed).	· Install a phase reversing cable between the controller and the first fixture on the link.
Fixtures reset correctly, but some respond erratically or not at all to the controller.	Poor data quality	· Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link.
	Bad data link connection	· Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.
	Data link not terminated with 120 Ohm termination plug.	· Insert termination plug in output jack of the last fixture on the link.
	Incorrect addressing of the fixtures.	· Check address setting.
	One of the fixtures is defective and disturbs data transmission on the link.	· Bypass one fixture at a time until normal operation is regained: unplug both connectors and connect them directly together. · Have the defective fixture serviced by a qualified technician.
	3-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed).	· Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture, that behaves erratically.
Fogger cuts out intermittently.	Fixture is too hot/cold.	· Allow fixture to cool/heat up. · Make sure air vents are not blocked. · Turn up the air conditioning.
	The power supply settings do not match local AC voltage and frequency.	· Disconnect fixture. Check settings and correct if necessary.

Product Specification

Model: Showtec Atmos 2000 Fogger

Voltage: AC 230V-50Hz (CE)

Power consumption: 2000W(230V)

2000 W Heater

Warm-up time approx. 6 min.

Fog output 40000cu.ft/min.

Tank Capacity: 3,2 L.

Fluid Consumption: 2 min / 1 liter

DMX-512 Control

DMX-512: 1 Channel

DMX Setup via Dipswitches

DMX Connector: 3 Pole XLR

Include Remote: On-Off Remote

Remote Connection: 5 Pole Din

Included: Remote Control; Cable length 5m. with Timer/Remote Controller

Wireless Remote Control Included

Also included: Wireless remote control with separate sender and receiver unit

Fuse 10A / 250V

Dimensions: 500 x 320 x 320 mm

Weight: 7,04 kg



Design and product specifications are subject to change without prior notice.



Website: www.Showtec.info

Email: service@highlite.nl



© 2011 Showtec.